




**OpenVox Communication Co Ltd**

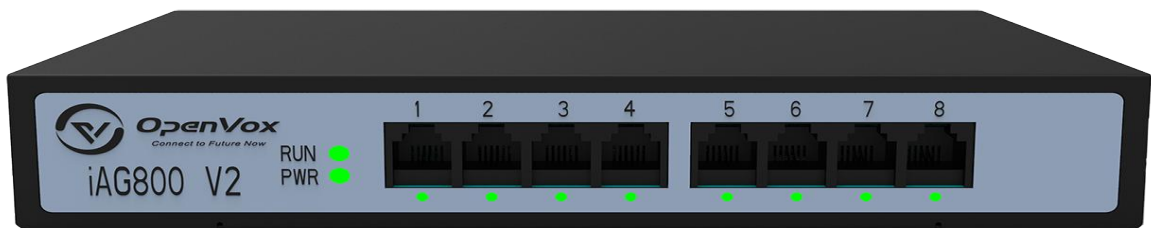

# iAG800 V2 Series Analog Gateway User Manual

Version 1.0



## OpenVox Communication Co Ltd

**Address:** Room 624, 6/F, Tsinghua Information Port, Book Building, Qingxiang Road, Longhua Street, Longhua District, Shenzhen, Guangdong, China 518109

**Tel:** +86-755-66630978, 82535461, 82535362

**Business Contact:** [sales@openvox.cn](mailto:sales@openvox.cn)

**Technical Support:** [support@openvox.cn](mailto:support@openvox.cn)

**Business Hours:** 09:00-18:00(GMT+8) from Monday to Friday

**URL:** [www.openvoxtech.com](http://www.openvoxtech.com)

*Thank You for Choosing OpenVox Products!*

## **Confidentiality**

Information contained herein is of a highly sensitive nature and is confidential and proprietary to OpenVox Inc. No part may be distributed, reproduced or disclosed orally or in written form to any party other than the direct recipients without the express written consent of OpenVox Inc.

## **Disclaimer**

OpenVox Inc. reserves the right to modify the design, characteristics, and products at any time without notification or obligation and shall not be held liable for any error or damage of any kind resulting from the use of this document.

OpenVox has made every effort to ensure that the information contained in this document is accurate and complete; however, the contents of this document are subject to revision without notice. Please contact OpenVox to ensure you have the latest version of this document.

## **Trademarks**

All other trademarks mentioned in this document are the property of their respective owners.

**Revise History**

Version	Release Date	Description
1.0	28/08/2020	First Version

## Contents

1. Overview .....	7
What is iAG Series Analog Gateway? .....	7
Sample Application .....	7
Product Appearance .....	8
Main Features .....	9
Physical Information .....	10
Software .....	10
2. System .....	11
Status .....	11
Time .....	11
Login Settings .....	12
General .....	14
Language Settings .....	14
Scheduled Reboot .....	14
Tools .....	14
Information .....	16
3. Analog .....	17
Channel Settings .....	17
Pickup Settings .....	18
Dial Matching Table .....	19
Advanced Settings .....	19
Special Function Keys .....	23
4. SIP .....	24
SIP Endpoints .....	24
Main Endpoint Settings .....	24
Advanced: Registration Options .....	26
Call Settings .....	27
Advanced: Signaling Settings .....	28

Advanced: Timer Settings .....	29
Media Settings .....	30
FXS Batch Binding SIP.....	30
Batch Create SIP.....	31
Advanced SIP Settings.....	31
Networking .....	31
NAT Settings.....	32
RTP Settings .....	33
Parsing and Compatibility .....	33
Security .....	34
Media .....	35
Sip Account Security .....	36
5. Routing.....	37
Call Routing Rules .....	37
Groups .....	40
Batch Create Rules.....	41
6. Network .....	43
Network Settings .....	43
VPN Settings.....	45
DDNS Settings .....	45
Toolkit .....	46
7. Advanced .....	48
Asterisk API .....	48
Asterisk CLI.....	50
Asterisk File Editor .....	51
8. Logs.....	52
Log Settings.....	52
System.....	54
CDR .....	54

# 1. Overview

## What is iAG Series Analog Gateway?

OpenVox iAG800 V2 series Analog Gateway, an upgrade product of the iAG Series, is an open source asterisk-based Analog VoIP Gateway solution for SMBs and SOHOs. With friendly GUI and unique modular design, users may easily setup their customized Gateway. Also secondary development can be completed through AMI (Asterisk Management Interface).

The iAG800 V2 Analog Gateways are comprised of six models: iAG800 V2-4S with 4 FXS ports, iAG800 V2-8S with 8 FXS ports, iAG800 V2-4O with 4 FXO ports, iAG800 V2-8O with 8 FXO ports, iAG800 V2-4S4O with 4 FXS ports and 4 FXO ports, and iAG800 V2-2S2O with 2 FXS ports and 2 FXO ports.

The iAG800 V2 Analog Gateways are developed for interconnecting a wide selection of codecs including G.711A, G.711U, G.729A, G.722, G.726, iLBC. iAG800 V2 series use standard SIP protocol and compatible with Leading VoIP platform, IPPBX and SIP servers. Such as Asterisk, Issabel, 3CX, FreeSWITCH, BroadSoft and VOS VoIP operating platform.

## Sample Application


**Figure 1-2-1 Topological Graph**




## Product Appearance

The picture below is appearance of iAG Series Analog Gateway.

**Figure 1-3-1 Product Appearance**

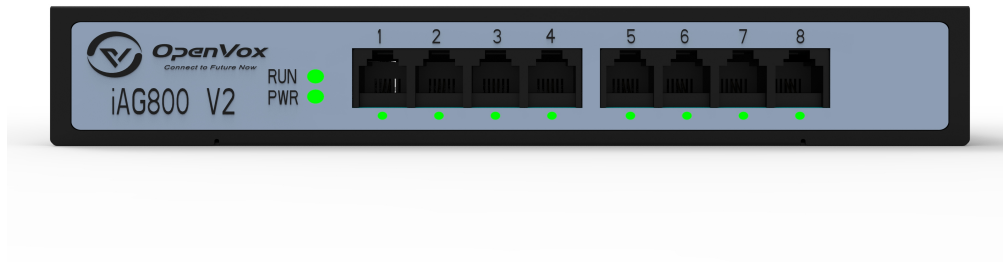

**Figure 1-3-2 Front Panel**

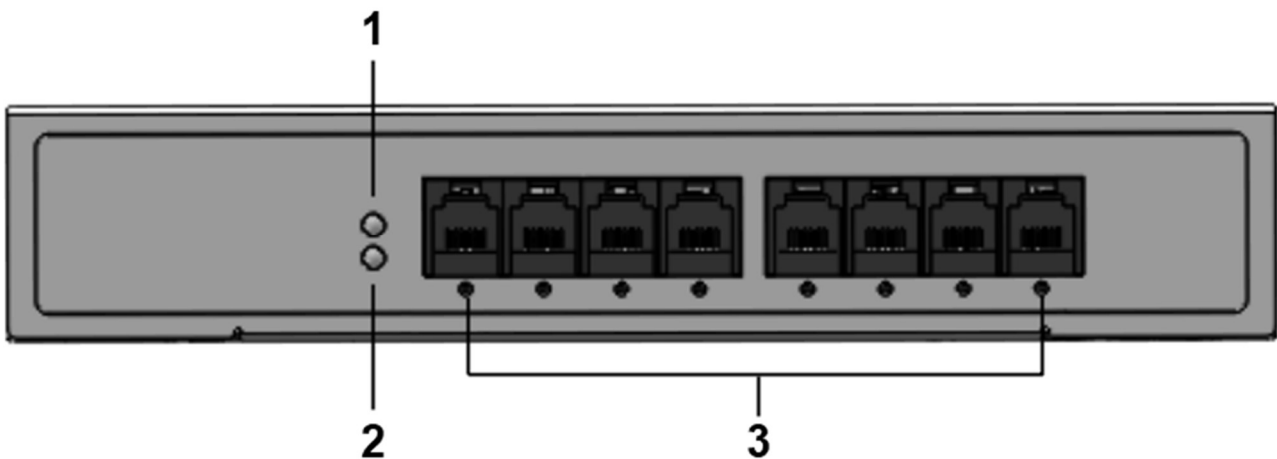

1: Power Indicator

2: System LED

3: Analog Telephone Interfaces and corresponding Channels State Indicators

**Figure 1-3-3 Back Panel**





- 1: Power interface
- 2: Reset button
- 3: Ethernet ports and indicators

## Main Features

### System Features

- NTP time synchronization and client time synchronization
- Support modify username and password for web login
- Update firmware online, backup/restore configuration file
- Abundant Log Info, Automatically Reboot, Call status display
- Language selection (Chinese/English)
- Open API interface (AMI), support for custom scripts, dialplans
- Support SSH remote operation and restore the factory settings

### Telephony Features

- Support Volume adjustment, Gain adjustment, call transfer, call hold, call waiting, call forward, Caller ID display
- Three way calling, Call transfer, Dial-up matching table
- Support T.38 fax relay and T.30 fax transparent, FSK and DTMF signaling
- Support Ring cadence and frequency setting, WMI (Message Waiting Indicator)
- Support Echo cancellation, Jitter buffer
- Support customizable DISA and other applications

### SIP Features

- Support add, modify & delete SIP Accounts, batch add, modify & delete SIP Accounts
- Support multiple SIP registrations: Anonymous, Endpoint registers with this gateway, This gateway registers with the endpoint
- SIP accounts can be registered to multiple servers

### Network

- Network type: Static IP, Dynamic
- Support DDNS, DNS, DHCP, DTMF relay, NAT
- Telnet, HTTP, HTTPS, SSH
- VPN client
- Network Toolbox

## Physical Information

**Table 1-5-1 Description of Physical Information**

Weight	637g
Size	19cm*3.5cm*14.2cm
Temperature	-20~70°C (Storage)
	0~50°C (Operation)
Operation humidity	10%~90% non-condensing
Power source	12V DC/2A
Max power	12W

## Software


**Default IP:** 172.16.99.1

**Username:** admin

**Password:** admin

Please enter the default IP in your browser to scan and configure the module you want.

**Figure 1-6-1 Login Interface**

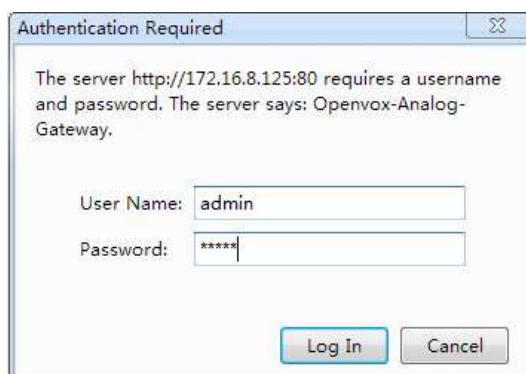

## 2. System

### Status

On the “Status” page, you will see Port/SIP/Routing/Network information and status.

**Figure 2-1-1 System Status**

Port Information				
Port	Name	Type	Line Status/Sip Account	Port Status
1	board-1-port1	FXO	Disconnected	OnHook
2	board-1-port2	FXO	Disconnected	OnHook
3	board-1-port3	FXO	Disconnected	OnHook
4	board-1-port4	FXO	Disconnected	OnHook
5	board-1-port5	FXS	8005	OnHook
6	board-1-port6	FXS	8006	OnHook
7	board-1-port7	FXS	8007	OnHook
8	board-1-port8	FXS	8008	OnHook

SIP Information					
Endpoint Name	User Name	Host	Registration	SIP Status	Response Code
9001	9001	172.16.8.250	server	OK	
9002	9002	172.16.8.250	server	OK	
9003	9003	(Unspecified)	server	UNKNOWN	
9004	9004	172.16.8.250	server	OK	
9000	9000	172.16.208.33	client	Registered	200 OK
8005	8005	172.16.208.33	client	Registered	200 OK
8006	8006	172.16.208.33	client	Registered	200 OK
8007	8007	172.16.208.33	client	Registered	200 OK
8008	8008	172.16.208.33	client	Registered	200 OK

Routing Information		
Rule Name	From	To

Network Information						
Name	MAC Address	IP Address	Mask	Gateway	RX Packets	TX Packets
LAN	A0:98:05:01:51:76	172.16.80.16	255.255.0.0	172.16.0.1	83463	3704

### Time

**Table 2-2-1 Description of Time Settings**

Options	Definition
System Time	Your gateway system time.
Time Zone	The world time zone. Please select the one which is the same or the

	closest as your city.
POSIX TZ String	Posix time zone strings.
NTP Server 1	Time server domain or hostname. For example, [time.asia.apple.com].
NTP Server 2	The first reserved NTP server. For example, [time.windows.com].
NTP Server 3	The second reserved NTP server. For example, [time.nist.gov].
Auto-Sync from NTP	Whether enable automatically synchronize from NTP server or not. ON is enable, OFF is disable this function.
Sync from NTP	Sync time from NTP server.
Sync from Client	Sync time from local machine.

For example, you can configure like this:

**Figure 2-2-1 Time Settings**

The screenshot shows the 'Time Settings' configuration interface. It includes a 'Time Settings' tab at the top. Below the tab is a form with the following fields and values:

- System Time:** 2017-12-20 12:19:56
- Time Zone:** Hong Kong (dropdown menu)
- POSIX TZ String:** HKT-8
- NTP Server 1:** pool.ntp.org
- NTP Server 2:** 202.112.29.82
- NTP Server 3:** (empty field)
- Auto-Sync from NTP:** ON (checkbox)

At the bottom of the form, there are two buttons: 'Sync from NTP' and 'Sync from Client'.

You can set your gateway time Sync from NTP or Sync from Client by pressing different buttons.

## Login Settings

Your gateway doesn't have administration role. All you can do here is to reset what new username and password to manage your gateway. And it has all privileges to operate your gateway. You can modify both your "Web Login

Settings” and “SSH Login Settings”. If you have changed these settings, you don’t need to log out, just rewriting your new user name and password will be OK.

**Table 2-3-1 Description of Login Settings**

Options	Definition
User Name	Define your username and password to manage your gateway, without space here. Allowed characters "-_+. < >&0-9a-zA-Z". Length: 1-32 characters.
Password	Allowed characters "-_+. < >&0-9a-zA-Z". Length: 4-32 characters.
Confirm Password	Please input the same password as 'Password' above.
Login Mode	Select the mode of login.
HTTP Port	Specify the web server port number.
HTTPS Port	Specify the web server port number.
Port	SSH login port number.

**Figure 2-3-1 Login Settings**

**Web Login Settings**

<b>User Name:</b>	<input type="text" value="admin"/>
<b>Password:</b>	<input type="password" value="....."/>
<b>Confirm Password:</b>	<input type="password" value="....."/>
<b>Login Mode:</b>	<input type="text" value="http and https"/>
<b>HTTP Port:</b>	<input type="text" value="80"/>
<b>HTTPS Port:</b>	<input type="text" value="443"/>

**SSH Login Settings**

<b>Enable:</b>	<input checked="" type="checkbox"/> ON
<b>User Name:</b>	<input type="text" value="admin"/>
<b>Password:</b>	<input type="password" value="....."/>
<b>Port:</b>	<input type="text" value="12345"/>

**Notice:** Whenever you do some changes, do not forget to save your configuration.

## General

### Language Settings

You can choose different languages for your system. If you want to change language, you can switch “Advanced” on, then “Download” your current language package. After that, you can modify the package with the language you need. Then upload your modified packages, “Choose File” and “Add”, those will be ok.

Figure 2-4-1 Language Settings

Language Settings	
Language:	English ▼
Advanced:	<input checked="" type="checkbox"/> ON
Language Debug:	<input type="checkbox"/> TURN ON <input type="checkbox"/> TURN OFF
Download:	Download selected language package. <input type="button" value="Download"/>
Delete:	Delete selected language. <input type="button" value="Delete"/>
Add New Language:	New language Package: <input type="button" value="选择文件"/> 未选择任何文件 <input type="button" value="Add"/>

### Scheduled Reboot

If switch it on, you can manage your gateway to reboot automatically as you like. There are four reboot types for you to choose, “By Day, By Week, By Month and By Running Time”.

Figure 2-4-2 Reboot Types

Scheduled Reboot	
Enable:	<input checked="" type="checkbox"/> ON
Reboot Type:	By Week ▼
Week:	Tue ▼
Time:	Hour: 14 ▼ Minute: 16 ▼


If use your system frequently, you can set this enable, it can helps system work more efficient.

## Tools

On the “Tools” pages, there are reboot, update, upload, backup and restore toolkits.

You can choose system reboot and Asterisk reboot separately.

**Figure 2-5-1 Reboot Prompt**

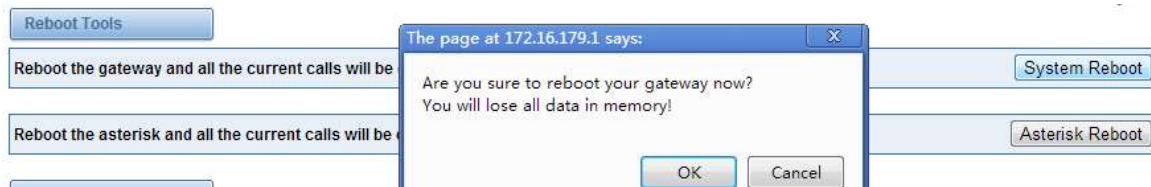


If you press “Yes”, your system will reboot and all current calls will be dropped. Asterisk Reboot is the same.

**Table 2-5-1 Instruction of reboots**

Options	Definition
System Reboot	This will turn off your gateway and then turn it back on. This will drop all current calls.
Asterisk Reboot	This will restart Asterisk and drop all current calls.


We offer two kinds of update types for you, you can choose System Update or System Online Update. System Online Update is an easier way to update your system.

**Figure 2-5-2 Update Firmware**

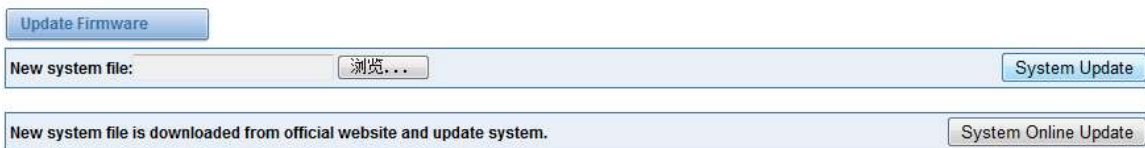


If you want to store your previous configuration, you can first backup configuration, then you can upload configuration directly. That will be very convenient for you. Notice, the version of backup and current firmware should be same, otherwise, it would not take effect.

**Figure 2-5-3 Upload and Backup**

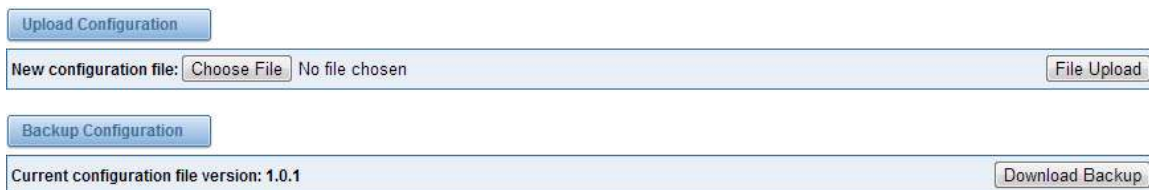

Sometimes there is something wrong with your gateway that you don’t know how to solve it, mostly you will select factory reset. Then you just need to press a button, your gateway will be reset to the factory status.

**Figure 2-5-4 Factory Reset**



## Information

On the “Information” page, there shows some basic information about the analog gateway. You can see software and hardware version, storage usage, memory usage and some help information.

**Figure 2-6-1 System Information**

<b>Model Name:</b>	VS-AGU-E2M0800
<b>Software Version:</b>	1.1.14
<b>Hardware Version:</b>	1.0.0
<b>Slot Number:</b>	1
<b>Storage Usage:</b>	1.7M/63.5M (3%)
<b>Memory Usage:</b>	60.3877 % <a href="#">Memory Clean</a>
<b>Build Time:</b>	2017-12-12 16:31:16
<b>Contact Address:</b>	10/F, Building 6-A, Baoneng Science and Technology Industrial Park, Longhua New District, Shenzhen, Guangdong, China 518109
<b>Tel:</b>	+86-755-82535461
<b>Fax:</b>	+86-755-83823074
<b>E-Mail:</b>	<a href="mailto:support@openvox.cn">support@openvox.cn</a>
<b>Web Site:</b>	<a href="http://www.openvox.cn">www.openvox.cn</a>
<b>System Time:</b>	2017-12-20 13:51:31
<b>System Uptime:</b>	0 days 02:10:41




### 3. Analog

You can see much information about your ports on this page.

### Channel Settings

Figure 3-1-1 Channel System


Port	Type	Name	Line Status/Sip Account	Port Status	Actions
1	FXO	board1-port1	Disconnected	OnHook	
2	FXO	board1-port2	Disconnected	OnHook	
3	FXO	board1-port3	Disconnected	OnHook	
4	FXO	board1-port4	Disconnected	OnHook	
5	FXS	board1-port5	8005	OnHook	
6	FXS	board1-port6	8006	OnHook	
7	FXS	board1-port7	8007	OnHook	
8	FXS	board1-port8	8008	OnHook	



On this page, you can see every port status, and click action button to configure the port.

Figure 3-1-2 FXO Port Configure

▼ General

<b>Port type:</b>	FXO
<b>Name:</b>	board1-port1 
<b>Rx gain:</b>	<input type="text" value="3.0"/>
<b>Tx gain:</b>	<input type="text" value="3.0"/>
<b>Ring timeout:</b>	<input type="text" value="8"/>

▼ Caller ID

<b>Use callerid:</b>	<input checked="" type="checkbox"/> ON
<b>Hide callerid:</b>	<input type="checkbox"/> OFF
<b>CID signalling:</b>	bell ▼
<b>DND:</b>	<input type="checkbox"/> OFF
<b>CID start signal:</b>	ring ▼

▼ Polarity

<b>Answer on polarity switch:</b>	<input type="checkbox"/> OFF
<b>Hangup on polarity switch:</b>	<input type="checkbox"/> OFF
<b>Polarity on answer delay:</b>	<input type="text" value="600"/>
<b>Delay reply 200 OK switch:</b>	<input type="checkbox"/> OFF

Figure 3-1-3 FXS Port Configure

▼ General	
Port type:	FXS
Name:	board1-port5
Rx gain:	3.0
Tx gain:	3.0
Ring timeout:	180
Sip Account:	None
Fallover fxo:	None
▼ Caller ID	
Caller ID:	8005
Full name:	Channel 8005
CID signalling:	bell
DND:	<input type="checkbox"/> OFF
▼ Call feature	
Call waiting:	<input checked="" type="checkbox"/> ON
Three way calling:	<input checked="" type="checkbox"/> ON
Call transfer:	<input checked="" type="checkbox"/> ON
Call forward:	No
Call forward number:	

## Pickup Settings

Call pickup is a feature used in a telephone system that allows one to answer someone else's telephone call. You can set the "Time Out" and "Number" parameters either globally or separately for each port. The feature is accessed by pressing a special sequence of numbers which you set as "Number" parameter on the telephone set when it is enabled this function.

Figure 3-2-1 Pickup Configure

Status Settings			
Enable:	<input checked="" type="checkbox"/> ON		
Time Out:	3000		
Number:	**8006		
5	Disabled	Time Out	Number
6	Disabled	Time Out	Number
7	Disabled	Time Out	Number
8	<b>Enabled</b>	Time Out	Number
<input type="button" value="Save"/>			

**Table 3-2-1 Definition of Pickup**

Options	Definition
Enable	ON(enabled),OFF(disabled)
Time Out	Set the timeout, in milliseconds (ms).Note: You can only enter numbers.
Number	Pickup number

## Dial Matching Table

Dialing rules is used to effectively judge whether the received number sequence is complete, in order to timely end receiving number and send out number

The correct use of dial-up rules, helps to shorten the turn-on time of phone call

**Figure 3-3-1 Port Configure**

<pre> _01[358]XXXXXXXX _010XXXXXXXX _02XXXXXXXX _0[3-9]XXXXXXXX _11[02-9] _111XX _9[56]XXX _100XX _10[1-9] _12[0-24-9] _1[358]XXXXXXXX _[235-7]XXXXXXXX _[48][1-9]XXXXXX _[48]0[1-9]XXXXX _[48]00XXXXXX _#XX _*XX ## _x.                 </pre>	<p>Dial Matching rule may be numbers, letters, or combinations thereof. If an rule is prefixed by a '_' character, it is interpreted as a pattern rather than a literal. In patterns, some characters have special meanings:</p> <ul style="list-style-type: none"> <li>X - any digit from 0-9</li> <li>Z - any digit from 1-9</li> <li>N - any digit from 2-9</li> <li>[1235-9] - any digit in the brackets (in this example, 1, 2, 3, 5, 6, 7, 8, 9)</li> <li>! - wildcard, causes the matching process to complete as soon as ;it can unambiguously determine that no other matches are possible</li> </ul> <p>For example, the rule _NXXXXXX would match normal 7 digit dialings, while _1NXXXXXXXX would represent an area code plus phone number preceded by a one.</p>
---	---

## Advanced Settings

**Figure 3-4-1 General Configuration**

General	
Tone duration:	<input type="text" value="100"/>
Dial timeout:	<input type="text" value="180"/>
Codec:	<input type="text" value="Ulaw"/>
Impedance:	<input type="text" value="China"/>
Echo cancel tap length:	<input type="text" value="512"/>
VAD/CNG:	<input type="checkbox"/> OFF
Flash/Wink:	<input checked="" type="checkbox"/> ON
Min flash time:	<input type="text" value="40"/>
Max flash time:	<input type="text" value="400"/>
"#" as Ending Dial Key:	<input checked="" type="checkbox"/> ON
Checking SIP Status:	<input type="checkbox"/> OFF

**Table 3-4-1 Instruction of General**

Options	Definition
Tone duration	How long generated tones (DTMF and MF) will be played on the channel. (in milliseconds)
Dial timeout	Specifies the number of seconds we attempt to dial the specified devices.
Codec	Set the global encoding : mulaw, alaw.
Impedance	Configuration for impedance.
Echo cancel tap length	Hardware echo canceler tap length.
VAD/CNG	Turn on/off VAD/CNG.
Flash/Wink	Turn on/off Flash/wink.
Max flash time	Max flash time.(in milliseconds).
"#" as Ending Dial Key	Turn on/off Ending Dial Key.
Checking SIP Status	Turn on/off SIP Account registration status checking.

Figure 3-4-2 Caller ID

▼ Caller ID	
The pattern of sending CID:	send CID after first ring ▼
Waiting time before sending CID:	100
Send polarity reversal(DTMF Only):	<input type="checkbox"/> OFF
Start code(DTMF Only):	
Stop code(DTMF Only):	
Display extension number	<input type="checkbox"/> OFF

Table 3-4-2 Instruction of Caller ID

Options	Definition
The pattern of sending CID	Some countries(UK) have ring tones with different ring tones(ring-ring), which means the caller ID needs to be set later on, and not just after the first ring, as per the default(1).
Waiting time before sending CID	How long we will waiting before sending the CID on the channel.(in milliseconds).
Sending polarity reversal(DTMF Only)	Send polarity reversal before sending the CID on the channel.
Start code(DTMF Only)	Start code.
Stop code(DTMF Only)	Stop code.

Figure 3-4-3 Hardware Gain

▼ Hardware gain	
FXO Rx gain:	0
FXO Tx gain:	0
FXS Rx gain:	0 ▼
FXS Tx gain:	0 ▼

**Table 3-4-3 Instruction of Hardware gain**

Options	Definition
FXS Rx gain	Set the FXS port Rx gain. Range: from -150 to 120. Select -35, 0 or 35.
FXS Tx gain	Set the FXS port Tx gain. Range: from -150 to 120. Select -35, 0 or 35.

**Figure 3-4-4 Fax Configuration**

The screenshot shows a configuration panel for Fax. At the top is a blue header with a dropdown arrow and the text 'Fax'. Below this are three rows of configuration options:

- Mode:** A dropdown menu currently set to 'T.38'.
- Rate:** A dropdown menu currently set to '14400'.
- Ecm:** A toggle switch currently set to 'OFF'.

**Table 3-4-4 Definition of Fax**

Options	Definition
Mode	Set the transmission mode.
Rate	Set the rate of sending and receiving.
Ecm	Enable/disable T.30 ECM (error correction mode) by default.

**Figure 3-4-5 Country Configuration**

The screenshot shows a configuration panel for Country. At the top is a blue header with a dropdown arrow and the text 'Country'. Below this are several rows of configuration options, each with a label and a text input field:

- Country:** A dropdown menu currently set to 'China'.
- Ring cadence:** Text input field containing '1000,4000'.
- Dial tone:** Text input field containing '450'.
- Ring tone:** Text input field containing '450/1000,0/4000'.
- Busy tone:** Text input field containing '450/350,0/350'.
- Call waiting tone:** Text input field containing '450/400,0/4000'.
- Congestion tone:** Text input field containing '450/700,0/700'.
- Dial recall tone:** Text input field containing '450'.
- Record tone:** Text input field containing '950/400,0/10000'.
- Info tone:** Text input field containing '450/100,0/100,450/100,0/100,450/100,0/100,450/400,0/400'.
- Stutter tone:** Text input field containing '450+425'.

**Table 3-4-5 Definition of Country**

Options	Definition
Country	Configuration for location specific tone indications.
Ring cadence	List of durations the physical bell rings.
Dial tone	Set of tones to be played when one picks up the hook.
Ring tone	Set of tones to be played when the receiving end is ringing.
Busy tone	Set of tones played when the receiving end is busy.
Call waiting tone	Set of tones played when there is a call waiting in the background.
Congestion tone	Set of tones played when there is some congestion.
Dial recall tone	Many phone systems play a recall dial tone after hook flash.
Record tone	Set of tones played when call recording is in progress.
Info tone	Set of tones played with special information messages (e.g., number is out of service.)

## Special Function Keys

**Figure 3-5-1 Function keys**

▼ Function Keys

<b>None Keys Blind Transfer:</b>	<input checked="" type="checkbox"/> ON
<b>Blind Transfer:</b>	<input type="text"/>
<b>Asked Transfer:</b>	<input type="text" value="*38"/>

## 4. SIP

### SIP Endpoints

This page shows everything about your SIP, you can see status of each SIP.

**Figure 4-1-1 SIP Status**

<input type="checkbox"/>	Endpoint Name	Registration	Credentials	Actions
<input type="checkbox"/>	8000	client	8000@172.16.80.134	
<input type="checkbox"/>	8001	client	8001@172.16.80.134	
<input type="checkbox"/>	8002	client	8002@172.16.80.134	
<input type="checkbox"/>	8003	client	8003@172.16.80.134	
<input type="checkbox"/>	8004	client	8004@172.16.80.134	
<input type="checkbox"/>	8005	client	8005@172.16.80.134	
<input type="checkbox"/>	8006	client	8006@172.16.80.134	
<input type="checkbox"/>	8007	client	8007@172.16.80.134	

You can click  button to add a new SIP endpoint, and if you want to modify existed endpoints, you can click button.

### Main Endpoint Settings

There are 3 kinds of registration types for choose. You can choose “Anonymous, Endpoint registers with this gateway or This gateway registers with the endpoint”.

You can configure as follows:

If you set up a SIP endpoint by registration “None” to a server, then you can’t register other SIP endpoints to this server. (If you add other SIP endpoints, this will cause Out-band Routes and Trunks confused.)



**Figure 4-1-2 Anonymous Registration**

Main Endpoint Settings	
Name:	301 <small>*Allowed character must be any of [0-9a-zA-Z~!@#%^(_{;?+=], 1 - 32 characters.</small>
User Name:	<input type="text"/> <input checked="" type="checkbox"/> Anonymous
Password:	<input type="password"/>
Registration:	None
Hostname or IP Address:	172.16.208.33
Backup Hostname or IP Address:	<input type="text"/>
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No
VOS Encryption:	No

For convenience, we have designed a method that you can register your SIP endpoint to your gateway, thus your gateway just work as a server.

**Figure 4-1-3 Register to Gateway**

Main Endpoint Settings	
Name:	301 <small>*Allowed character must be any of [0-9a-zA-Z~!@#%^(_{;?+=], 1 - 32 characters.</small>
User Name:	301 <input type="checkbox"/> Anonymous
Password:	***
Registration:	Endpoint registers with this gateway
Hostname or IP Address:	dynamic
Backup Hostname or IP Address:	<input type="text"/>
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No
VOS Encryption:	No

Also you can choose registration by “This gateway registers with the endpoint”, it’s the same with “None”, except name and password.

**Figure 4-1-4 Register to Server**

Main Endpoint Settings	
Name:	301 <small>*Allowed character must be any of [0-9a-zA-Z~!@#%^(_{;?+=], 1 - 32 characters.</small>
User Name:	301 <input type="checkbox"/> Anonymous
Password:	***
Registration:	This gateway registers with the endpoint
Hostname or IP Address:	172.16.208.63
Backup Hostname or IP Address:	<input type="text"/>
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No
VOS Encryption:	No

**Table 4-1-1 Definition of SIP Options**

Options	Definition
Name	A name which is able to read by human. And it's only used for user's reference.
Username	User Name the endpoint will use to authenticate with the gateway.
Password	Password the endpoint will use to authenticate with the gateway. Allowed characters.
Registration	<p><b>None</b>---Not registering;</p> <p><b>Endpoint registers with this gateway</b>---When register as this type, it means the GSM gateway acts as a SIP server, and SIP endpoints register to the gateway;</p> <p><b>This gateway registers with the endpoint</b>---When register as this type, it means the GSM gateway acts as a client, and the endpoint should be register to a SIP server;</p>
Hostname or IP Address	IP address or hostname of the endpoint or 'dynamic' if the endpoint has a dynamic IP address. This will require registration.
Transport	<p>This sets the possible transport types for outgoing. Order of usage, when the respective transport protocols are enabled, is UDP, TCP, TLS. The first enabled transport type is only used for outbound messages until a Registration takes place.</p> <p>During the peer Registration the transport type may change to another supported type if the peer requests so.</p>
NAT Traversal	<p>Addresses NAT-related issues in incoming SIP or media sessions.</p> <p><b>No</b>---Use Rport if the remote side says to use it.</p> <p><b>Force Rport on</b>---Force Rport to always be on.</p> <p><b>Yes</b>---Force Rport to always be on and perform comedia RTP handling.</p> <p><b>Rport if requested and comedia</b>---Use Rport if the remote side says to use it and perform comedia RTP handling.</p>

## Advanced: Registration Options

**Table 4-1-2 Definition of Registration Options**

Options	Definition
Authentication User	A username to use only for registration.
Register Extension	When Gateway registers as a SIP user agent to a SIP proxy (provider), calls from this provider connect to this local extension.
From User	A username to identify the gateway to this endpoint.
From Domain	A domain to identify the gateway to this endpoint.
Remote Secret	A password which is only used if the gateway registers to the remote side.
Port	The port number the gateway will connect to at this endpoint.
Quality	Whether or not to check the endpoint's connection status.
Qualify Frequency	How often, in seconds, to check the endpoint's connection status.
Outbound Proxy	A proxy to which the gateway will send all outbound signaling instead of sending signaling directly to endpoints.
Custom Registry	Custom Registry On / Off.
Enable Outboundproxy to Host	Outboundproxy to Host On / Off.

## Call Settings

**Table 4-1-3 Definition of Call Options**

Options	Definition
DTMF Mode	Set default DTMF Mode for sending DTMF. Default: rfc2833. Other options: 'info', SIP INFO message (application/dtmf-relay); 'Inband', Inband audio (require 64kbit codec -alaw, ulaw).
Call Limit	Setting a call-limit will cause calls above the limit not to be accepted.

Trust Remote-Party-ID	Whether or not the Remote-Party-ID header should be trusted.
Send Remote-Party-ID	Whether or not to send the Remote-Party-ID header.
Remote Party ID Format	How to set the Remote-Party-ID header: from Remote-Party-ID or from P-Asserted-Identity.
Caller ID Presentation	Whether or not to display Caller ID.

## Advanced: Signaling Settings

**Table 4-1-4 Definition of Signaling Options**

Options	Definition
Progress Inband	<p>If we should generate in-band ringing.</p> <p>Always use 'never' to never use in-band signaling, even in cases where some buggy devices might not render it.</p> <p>Valid values: yes, no never.</p> <p>Default: never.</p>
Allow Overlap Dialing	<p>Allow Overlap Dialing: Whether or not to allow overlap dialing.</p> <p>Disabled by default.</p>
Append user=phone to URI	<p>Whether or not to add '; user=phone' to URIs that contain a valid phone number.</p>
Add Q.850 Reason Headers	<p>Whether or not to add Reason header and to use it if it is available.</p>
Honor SDP Version	<p>By default, the gateway will honor the session version number in SDP packets and will only modify the SDP session if the version number change. Turn this option off to force the gateway to ignore the SDP session version number and treat all SDP data as new data. This is</p>

	required for devices that send non-standard SDP packets (observed with Microsoft OCS). By default this option is on.
Allow Transfers	Whether or not to globally enable transfers. Choosing 'no' will disable all transfers (unless enabled in peers or users). Default is enabled.
Allow Promiscuous Redirects	Whether or not to allow 302 or REDIR to non-local SIP address. Note that promiscuredir when redirects are made to the local system will cause loops since this gateway is incapable of performing a "hairpin" call.
Max Forwards	Setting for the SIP Max-Forwards header (loop prevention).
Send TRYING on REGISTER	Send a 100 Trying when the endpoint registers.

## Advanced: Timer Settings

**Table 4-1-5 Definition of Timer Options**

Options	Definition
Default T1 Timer	This timer is used primarily in INVITE transactions. The default for Timer T1 is 500ms or the measured run-trip time between the gateway and the device if you have qualify=yes for the device.
Call Setup Timer	If a provisional response is not received in this amount of time, the call will auto-congest. Defaults to 64 times the default T1 timer.
Session Timers	Session-Timers feature operates in the following three modes: originate, Request and run session-timers always; accept, run session-timers only when requested by other UA; refuse, do not run session timers in any case.
Minimum Session Refresh Interval	Minimum session refresh interval in seconds. Default is 90secs.

Maximum Session Refresh Interval	Maximum session refresh interval in seconds. Defaults to 1800secs.
Session Refresher	The session refresher, uac or uas. Defaults to uas.

## Media Settings

Table 4-1-6 Definition of Media Settings

Options	Definition
Media Settings	Select codec from the drop down list. Codecs should be different for each Codec Priority.

## FXS Batch Binding SIP

If you want binding batch Sip accounts to FXS port, you can configure this page. Look out: this is only used when “This gateway registers with the endpoint” work mode.

Figure 4-2-1 FXS Batch Binding SIP

<input type="checkbox"/>	Port	Port Name	User Name	Password	Hostname or IP Address	Port	VOS Encryption	Codec Priority	Support Codec
<input type="checkbox"/>			<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	1	board-1-port1	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	2	board-1-port2	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	3	board-1-port3	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	4	board-1-port4	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	5	board-1-port5	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.723 ▾	All ▾
<input type="checkbox"/>	6	board-1-port6	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	Solo ▾
<input type="checkbox"/>	7	board-1-port7	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 a-law ▾	All ▾
<input type="checkbox"/>	8	board-1-port8	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾

AutoPassword

## Batch Create SIP

If you want add batch Sip accounts, you can configure this page. You can choose all the register mode.

**Figure 4-3-1 Batch SIP Endpoints**

<input type="checkbox"/>	ID	User Name	Password	Hostname or IP Address	Port	Register Mode
<input type="checkbox"/>		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾

AutoPassword

## Advanced SIP Settings

### Networking

**Table 4-4-1 Definition of Networking Options**

Options	Definition
UDP Bind Port	Choose a port on which to listen for UDP traffic.
Enable TCP	Enable server for incoming TCP connection (default is no).
TCP Bind Port	Choose a port on which to listen for TCP traffic.
TCP Authentication Timeout	The maximum number of seconds a client has to authenticate. If the client does not authenticate before this timeout expires, the client will be disconnected.(default value is: 30 seconds).
TCP Authentication Limit	The maximum number of unauthenticated sessions that will be allowed to connect at any given time(default is:50).
Enable Hostname Lookup	Enable DNS SRV lookups on outbound calls Note: the gateway only uses the first host in SRV records Disabling DNS SRV lookups disables the ability to place SIP calls based on domain names to some other SIP users on the Internet specifying a port in a SIP peer definition or when dialing

	outbound calls with suppress SRV lookups for that peer or call.
--	---

## NAT Settings

**Table 4-4-2 Definition of NAT Settings**

Options	Definition
Local Network	<p>Format:192.168.0.0/255.255.0.0 or 172.16.0.0./12. A list of IP address or IP ranges which are located inside a NATed network.</p> <p>This gateway will replace the internal IP address in SIP and SDP messages with the external IP address when a NAT exists between the gateway and other endpoints.</p>
Local Network List	Local IP address list that you added.
Subscribe Network Change Event	<p>Through the use of the test_stun_monitor module, the gateway has the ability to detect when the perceived external network address has changed. When the stun_monitor is installed and configured, chan_sip will renew all outbound registrations when the monitor detects any sort of network change has occurred.</p> <p>By default this option is enabled, but only takes effect once res_stun_monitor is configured. If res_stun_monitor is enabled and you wish to not generate all outbound registrations on a network change, use the option below to disable this feature.</p>
Match External Address Locally	Only substitute the externaddr or externhost setting if it matches
Dynamic Exclude Static	Disallow all dynamic hosts from registering as any IP address. Used for statically defined hosts. This helps avoid the configuration error of allowing your users to register at the same address as a SIP provider.
Externally Mapped TCP Port	The externally mapped TCP port, when the gateway is behind a static NAT or PAT
External Address	<p>The external address (and optional TCP port) of the NAT.</p> <p>External Address = hostname[:port] specifies a static address[:port] to be used in SIP and SDP messages.Examples:</p> <p>External Address = 12.34.56.78</p>



	External Address = 12.34.56.78:9900
External Hostname	The external hostname (and optional TCP port) of the NAT. External Hostname = hostname[:port] is similar to External Address. Examples: External Hostname = foo.dyndns.net
Hostname Refresh Interval	How often to perform a hostname lookup. This can be useful when your NAT device lets you choose the port mapping, but the IP address is dynamic. Beware, you might suffer from service disruption when the name server resolution fails.

## RTP Settings

**Table 4-4-3 Definition of NAT Settings Options**

Options	Definition
Start of RTP Port Range	Start of range of port numbers to be used for RTP.
End of RTP port Range	End of range of port numbers to be used for RTP.
RTP Timeout	

## Parsing and Compatibility

**Table 4-4-4 Instruction of Parsing and Compatibility**

Options	Definition
Strict RFC Interpretation	Check header tags, character conversion in URIs, and multiline headers for strict SIP compatibility(default is yes)
Send Compact Headers	Send compact SIP headers
SDP Owner	Allows you to change the username filed in the SDP owner string. This filed MUST NOT contain spaces.
Disallowed SIP	The external hostname (and optional TCP port) of the NAT.

Methods	
Shrink Caller ID	<p>The shrinkcallerid function removes '(', ' ', ')', non-trailing '.', and '-' not in square brackets. For example, the caller id value 555.5555 becomes 5555555 when this option is enabled.</p> <p>Disabling this option results in no modification of the caller id value, which is necessary when the caller id represents something that must be preserved. By default this option is on.</p>
Maximum Registration Expiry	Maximum allowed time of incoming registrations and subscriptions (seconds).
Minimum Registration Expiry	Minimum length of registrations/subscriptions (default 60).
Default Registration Expiry	Default length of incoming/outgoing registration.
Registration Timeout	How often, in seconds, to retry registration calls. Default 20 seconds.
Number of Registration Attempts Enter '0' for unlimited	Number of registration attempts before we give up. 0 = continue forever, hammering the other server until it accepts the registration. Default is 0 tries, continue forever.

## Security

**Table 4-4-5 Instruction of Security**

Options	Definition
Match Auth Username	If available, match user entry using the 'username' field from the authentication line instead of the 'from' field.
Realm	Realm for digest authentication. Realms MUST be globally unique according to RFC 3261. Set this to your host name or domain name.

Use Domain as Realm	Use the domain from the SIP Domains setting as the realm. In this case, the realm will be based on the request 'to' or 'from' header and should match one of the domain. Otherwise, the configured 'realm' value will be used.
Always Auth Reject	When an incoming INVITE or REGISTER is to be rejected, for any reason, always reject with an identical response equivalent to valid username and invalid password/hash instead of letting the requester know whether there was a matching user or peer for their request. This reduces the ability of an attacker to scan for valid SIP usernames. This option is set to 'yes' by default.
Authenticate Options Requests	Enabling this option will authenticate OPTIONS requests just like INVITE requests are. By default this option is disabled.
Allow Guest Calling	Allow or reject guest calls (default is yes, to allow). If your gateway is connected to the Internet and you allow guest calls, you want to check which services you offer everyone out there, by enabling them in the default context.

## Media

**Table 4-4-6 Instruction of Media**

Options	Definition
Premature Media	Some ISDN links send empty media frames before the call is in ringing or progress state. The SIP channel will then send 183 indicating early media which will be empty - thus users get no ring signal. Setting this to "yes" will stop any media before we have call progress (meaning the SIP channel will not send 183 Session Progress for early media). Default is 'yes'. Also make sure that the SIP peer is configured with progressinband=never. In order for 'noanswer' applications to work, you need to run the progress()

	application in the priority before the app.
TOS for SIP Packets	Sets type of service for SIP packets
TOS for RTP Packets	Sets type of service for RTP packets

## Sip Account Security

This analog gateway support TLS protocol for encrypting calls. On the one hand, it can worked as TLS server, generate the session keys used for the secure connection. On the other hand, it also can be registered as a client, upload the key files provided by the server.

Figure 4-5-1 TLS settings

Table 4-5-1 Instruction of TLS

Options	Definition
TLS Enable	Enable or disable DTLS-SRTP support.
TLS Verify Server	Enable or disable tls verify server(default is no).
Port	Specify the port for remote connection.
TLS Client Method	Values include tlsv1, sslv3, sslv2, Specify protocol for outbound client connections, default is sslv2.

## 5. Routing

The gateway embraces the flexible and friendly routing settings for user. It supports up to 512 routing rules and about 100 pairs of calleeID/callerID manipulations can be set in a rule. It support DID function The gateway support trunk group and trunk priority management.

### Call Routing Rules

Figure 5-1-1 Routing Rules

<input type="checkbox"/>	Move	Order	Rule Name	From	To	Actions
<input type="checkbox"/>		2	test	8006	4	
<input type="checkbox"/>		1	outbound	soft phone	9000	
<input type="checkbox"/>		3	out_test	9004	8005	
<input type="checkbox"/>		4	inbound	9000	soft phone	

You are allowed to set up new routing rule by  , and after setting routing rules, move rules' order by pulling up and down, click button to edit the routing and to delete it. Finally click the  button to save what you set.  will show current routing rules. Otherwise you can set up unlimited routing rules.

There is an example for routing rules number conversion, it transform calling, called number at the same time. Suppose you want eleven numbers start at 159 to call the eleven numbers of start at 136. Calling transform delete the three numbers from left, then writing number 086 as prefix, delete the last four numbers, and then add number 0755 at the end, it will show caller name is China Telecom. Called transform adds 086 as prefix, and Change the last two number to 88.

Figure 5-1-1

processing rules	prepend	prefix	Match pattern	SdfR	StA	RdfR	Caller Name
Calling Transformation	086	159	xxxxxxx	4	0755		China telecom
Called transformation	086	136	xxxxxxx	2	88		N/A

You can click **New Call Routing Rule** button to set up your routings.

**Figure 5-1-2 Example of Setup Routing Rule**

**Create a Call Routing Rule**

Call Routing Rule

Routing Name: support

Call Comes in From: fco-1

Send Call Through: soft phone

DISA Settings

Authentication: OFF

Advance Routing Rule

Cid Number Settings

Cid Number:

Save Cancel

The figure above realizes that calls from “support” SIP endpoint switch you have registered will be transferred to Port-1. When “Call Comes in From” is 1001, “prepend”, “prefix” and “match pattern” in “Advanced Routing Rule” are ineffective, and just “CallerID” option is available.

**Table 5-1-2 Definition of Call Routing Rule**

Options	Definition
Routing Name	The name of this route. Should be used to describe what types of calls this route matches (for example, ‘SIP2GSM’ or ‘GSM2SIP’).
Call Comes in From	The launching point of incoming calls.
Send Call Through	The destination to receive the incoming calls.

**Figure 5-1-3 Advance Routing Rule**

Advance Routing Rule

CalleeD/callerID Manipulation

Callee\_Dial\_pattern Prepend + Prefix | Match Pattern | (- Sdfr + Sta) | RdfR

Caller\_Dial\_pattern Prepend + Prefix | Match Pattern | (- Sdfr + Sta) | RdfR | Caller Name | Modify\_CallerID

+ Add More Dial Pattern Fields

Time Patterns that will use this Route

Time to start: Week Day start: Month Day start: Month start:

Time to finish: Week Day finish: Month Day finish: Month finish:

+ Add More Time Pattern Fields

Change Rules

Forward Number

Failover Call Through Number

Add a Failover Call Through Provider

**Table 5-1-3 Definition of Advance Routing Rule**





Options	Definition
CalleelD/callerID Manipulation	<p>A Dial Pattern is a unique set of digits that will select this route and send the call to the designated trunks. If a dialed pattern matches this route, no subsequent routes will be tried. If Time Groups are enabled, subsequent routes will be checked for matches outside of the designated time(s).</p> <p>X matches any digit from 0-9</p> <p>Z matches any digit from 1-9</p> <p>N matches any digit from 2-9</p> <p>[1237-9]matches any digit in the brackets (example: 1,2,3,7,8,9)</p> <p>. wildcard, matches one or more dialed digits</p> <p>Prepend: Digits to prepend to a successful match. If the dialed number matches the patterns specified by the subsequent columns, then this will be prepended before sending to the trunks.</p> <p>Prefix: Prefix to remove on a successful match. The dialed number is compared to this and the subsequent columns for a match. Upon a match, this prefix is removed from the dialed number before sending it to the trunks.</p> <p>Mach Pattern: The dialed number will be compared against the prefix + this match pattern. Upon a match, the match pattern portion of the dialed number will be sent to the trunks.</p> <p>SDfR(Stripped Digits from Right): The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted.</p> <p>RDfR(Reserved Digits from Right): The amount of digits to be reserved from the right end of the number. If the value of this item under the length of the current number, the whole number will be reserved.</p> <p>StA(Suffix to Add): Designated information to be added to the right end of the current number.</p> <p>Caller Name: What caller name would you like to set before sending this call to the</p>


	<p>endpoint.</p> <p>Disabled Caller Number Change : Disable the caller number change, and fixed caller number match pattern.</p>
Time Patterns that will use this Route	Time Patterns that will use this Route help
Forward Number	<p>What destination number will you dial?</p> <p>This is very useful when you have a transfer call.</p>
Failover Call Through Number	The gateway will attempt to send the call out each of these in the order you specify.

## Groups

Sometimes you want to make a call through one port, but you don't know if it is available, so you have to check which port is free. That would be troublesome. But with our product, you don't need to worry about it. You can combine many Ports or SIP to groups. Then if you want to make a call, it will find available port automatically.

**Figure 5-2-1 Group Rules**

Group Name	Type	Policy	Members	Actions
all	fxo	roundrobin	1, 2, 3, 4, 5, 6, 7, 8	 
SIP	sip	roundrobin	987, 1002, 980, 981, 982, 983, 984, 985, 986	 

You can click  button to set new group, and if you want to modify existed group,

you can click  button.



Figure 5-2-2 Create a Group

**Create a Group**

Routing Groups

Group Name:	<input type="text"/>																														
Type:	SIP																														
Policy:	Reverse Roundrobin																														
Members	<table border="0"> <tr> <td>NO.</td> <td><input type="checkbox"/></td> <td>All</td> </tr> <tr> <td>1</td> <td><input type="checkbox"/></td> <td>sjp-8005</td> </tr> <tr> <td>2</td> <td><input checked="" type="checkbox"/></td> <td>sjp-8006</td> </tr> <tr> <td>3</td> <td><input type="checkbox"/></td> <td>sjp-8007</td> </tr> <tr> <td>4</td> <td><input checked="" type="checkbox"/></td> <td>sjp-8008</td> </tr> <tr> <td>5</td> <td><input type="checkbox"/></td> <td>sjp-9001</td> </tr> <tr> <td>6</td> <td><input type="checkbox"/></td> <td>sjp-9002</td> </tr> <tr> <td>7</td> <td><input checked="" type="checkbox"/></td> <td>sjp-9003</td> </tr> <tr> <td>8</td> <td><input type="checkbox"/></td> <td>sjp-9004</td> </tr> <tr> <td>9</td> <td><input type="checkbox"/></td> <td>sjp-9000</td> </tr> </table>	NO.	<input type="checkbox"/>	All	1	<input type="checkbox"/>	sjp-8005	2	<input checked="" type="checkbox"/>	sjp-8006	3	<input type="checkbox"/>	sjp-8007	4	<input checked="" type="checkbox"/>	sjp-8008	5	<input type="checkbox"/>	sjp-9001	6	<input type="checkbox"/>	sjp-9002	7	<input checked="" type="checkbox"/>	sjp-9003	8	<input type="checkbox"/>	sjp-9004	9	<input type="checkbox"/>	sjp-9000
NO.	<input type="checkbox"/>	All																													
1	<input type="checkbox"/>	sjp-8005																													
2	<input checked="" type="checkbox"/>	sjp-8006																													
3	<input type="checkbox"/>	sjp-8007																													
4	<input checked="" type="checkbox"/>	sjp-8008																													
5	<input type="checkbox"/>	sjp-9001																													
6	<input type="checkbox"/>	sjp-9002																													
7	<input checked="" type="checkbox"/>	sjp-9003																													
8	<input type="checkbox"/>	sjp-9004																													
9	<input type="checkbox"/>	sjp-9000																													

Save Cancel

Figure 5-2-3 Modify a Group

**Modify a Group**

Routing Groups

Group Name:	all															
Type:	FXO															
Policy:	Least Recent(*experiment)															
Members	<table border="0"> <tr> <td>NO.</td> <td><input type="checkbox"/></td> <td>All</td> </tr> <tr> <td>1</td> <td><input checked="" type="checkbox"/></td> <td>fxo-1</td> </tr> <tr> <td>2</td> <td><input checked="" type="checkbox"/></td> <td>fxo-2</td> </tr> <tr> <td>3</td> <td><input checked="" type="checkbox"/></td> <td>fxo-3</td> </tr> <tr> <td>4</td> <td><input checked="" type="checkbox"/></td> <td>fxo-4</td> </tr> </table>	NO.	<input type="checkbox"/>	All	1	<input checked="" type="checkbox"/>	fxo-1	2	<input checked="" type="checkbox"/>	fxo-2	3	<input checked="" type="checkbox"/>	fxo-3	4	<input checked="" type="checkbox"/>	fxo-4
NO.	<input type="checkbox"/>	All														
1	<input checked="" type="checkbox"/>	fxo-1														
2	<input checked="" type="checkbox"/>	fxo-2														
3	<input checked="" type="checkbox"/>	fxo-3														
4	<input checked="" type="checkbox"/>	fxo-4														

Save Cancel

Table 5-2-1 Definition of Routing Groups

Options	Definition
Group Name	The mean of this route. Should be used to describe what types of calls this route match (for example, 'sip1 TO port1' or 'port1 To sip2').

## Batch Create Rules

If you bind telephone for each FXO port and want to establish separate call routings for them. For convenience, you can batch create call routing rules for each FXO port at once in this page.

**Figure 5-3-1 Batch Create Rules**

Port	Forward Number	Sip Endpoint	CallerID
FXO-1	<input type="text"/>	None ▼	<input type="text"/>
FXO-2	<input type="text"/>	None ▼	<input type="text"/>
FXO-3	<input type="text"/>	None ▼	<input type="text"/>
FXO-4	<input type="text"/>	None ▼	<input type="text"/>

## 6. Network

On “Network” page, there are “Network Settings”, “VPN Settings”, “DDNS Settings”, and “Toolkit”.

### Network Settings

There are three types of LAN port IP, Factory, Static and DHCP. Factory is the default type, and it is 172.16.99.1.

When you Choose LAN IPv4 type is “Factory”, this page is not editable.

A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.

Figure 6-1-1 LAN Settings Interface

<b>LAN IPv4</b>	
Interface:	eth0
Type:	Static
MAC:	A0:98:05:01:51:76
<b>IPv4 Settings</b>	
Address:	172.16.80.16
Netmask:	255.255.0.0
Default Gateway:	172.16.0.1
<b>DNS Servers</b>	
DNS Server 1:	202.96.134.133
DNS Server 2:	202.96.128.166
DNS Server 3:	8.8.8.8
DNS Server 4:	
<b>Reserved Access IP</b>	
Enable:	<input checked="" type="checkbox"/> ON
Reserved Address:	192.168.99.1
Reserved Netmask:	255.255.255.0

Table 6-1-1 Definition of Network Settings

Options	Definition
---------	------------

Interface	The name of network interface.
Type	The method to get IP. Factory: Getting IP address by Slot Number (System → information to check slot number). Static: manually set up your gateway IP. DHCP: automatically get IP from your local LAN.
MAC	Physical address of your network interface.
Address	The IP address of your gateway.
Netmask	The subnet mask of your gateway.
Default Gateway	Default gateway IP address.
Reserved Access IP	A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.
Enable	A switch to enable the reserved IP address or not. ON(enabled), OFF(disabled)
Reserved Address	The reserved IP address for this gateway.
Reserved Netmask	The subnet mask of the reserved IP address.

Basically this info is from your local network service provider, and you can fill in four DNS servers.

**Figure 6-1-2 DNS Interface**

DNS Servers

<b>DNS Server 1:</b>	<input style="width: 80%;" type="text" value="221.179.38.7"/>
<b>DNS Server 2:</b>	<input style="width: 80%;" type="text"/>
<b>DNS Server 3:</b>	<input style="width: 80%;" type="text"/>
<b>DNS Server 4:</b>	<input style="width: 80%;" type="text"/>

**Table 6-1-2 Definition of DNS Settings**

Options	Definition
DNS Servers	A list of DNS IP address. Basically this info is from your local network service provider.

## VPN Settings

You can upload the VPN client configuration, if success, you can see a VPN virtual network card on SYSTEM status page. About the configure format you can refer to the Notice and Sample configuration.

**Figure 6-2-1 VPN Interface**

The screenshot shows the VPN Settings interface. At the top, there is a 'VPN Settings' tab. Below it, the 'VPNTYPE:' is set to 'OpenVPN'. A tooltip provides details: 'The type of VPN. OpenVPN: openvpn. PPTP VPN: pptp vpn. None: None.' The 'OpenVPN Settings' section includes an 'Upload Configuration:' field with a 'File Upload' button and a 'Notice:' section containing four instructions: 1. The format of the upload file should be like this xxxx.tar.gz; 2. The postfix of configuration files should be .conf; 3. The upload file can not include any directory; 4. If still confused please download the sample configuration and refer to it; and a 'Sample Configuration' link with a 'Download Samples' button. A 'Save' button is located at the bottom left.

## DDNS Settings

You can enable or disable DDNS (dynamic domain name server).

**Figure 6-3-1 DDNS Interface**

The screenshot shows the DDNS Settings interface. It features a 'DDNS Settings' tab and a form with the following fields: 'DDNS:' is a toggle switch set to 'ON'; 'Type:' is a dropdown menu set to 'inadynd'; 'Username:' is a text input field containing 'admin'; 'Password:' is a text input field containing 'admin'; and 'Your domain:' is a text input field containing 'www.internet.site.com'.

**Table 6-3-1 Definition of DDNS Settings**

Options	Definition
DDNS	Enable/Disable DDNS(dynamic domain name)
Type	Set the type of DDNS server.
Username	Your DDNS account's login name.
Password	Your DDNS account's password.
Your domain	The domain to which your web server will belong.

## Toolkit

It is used to check network connectivity. Support Ping command on web GUI.

**Figure 6-4-1 Network Connectivity Checking**

Interface: LAN

google.com Ping

google.com Traceroute

**Output**

```
ping -I 172.16.179.1 -c 4 google.com
PING google.com (173.194.72.101) from 172.16.179.1: 56 data bytes
64 bytes from 173.194.72.101: icmp_seq=1 ttl=46 time=596.6 ms
64 bytes from 173.194.72.101: icmp_seq=3 ttl=46 time=600.5 ms

--- google.com ping statistics ---
4 packets transmitted, 2 packets received, 50% packet loss
round-trip min/avg/max = 596.6/598.5/600.5 ms
```

**Result**

Successfully ping [ google.com ].

**Figure 6-4-2 Channel Recording**

Channel Recording

Interface: eth0

Source host:

Destination host: 172.16.208.33

Port: 5060

Channel: 1

Tcpcmd Option Paramater: UDP

Add a Tcpcmd paramter option

Start

Figure 6-4-3 Capture Network Data

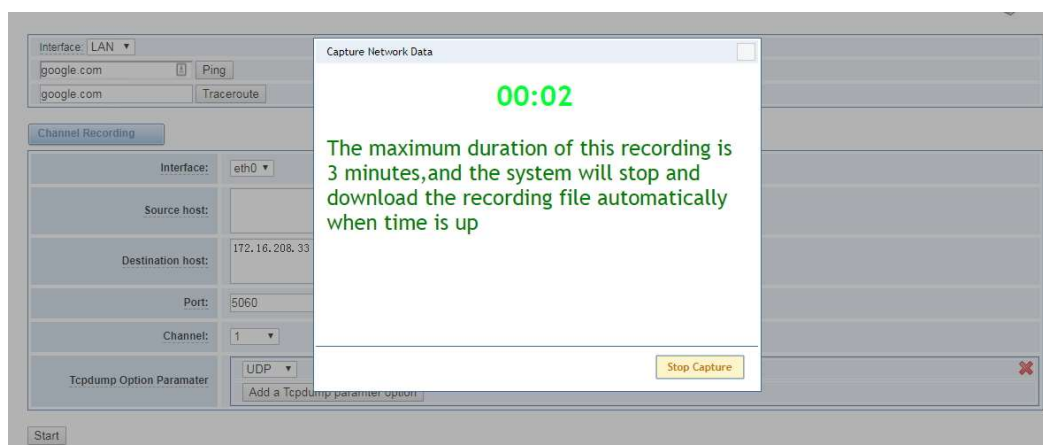


Table 6-4-1 Definition of Channel Recording

Options	Definition
Interface	The name of network interface.
Source host	Capture the data of source host you specified
Destination host	Capture the data of destination host you specified
Port	Capture the data of port you specified
Channel	Capture the data of channel you specified
Tcpdump Option Parameter	The tool of tcpdump capture network data by parameter option specified.

## 7. Advanced

### Asterisk API

When you make “Enable” switch to “on”, this page is available.

**Figure 7-1-1 API Interface**

The screenshot shows the Asterisk API configuration interface with three sections: General, Manager, and Rights.

- General:**
  - Enabled:  ON
  - Port: 5038
- Manager:**
  - Manager Name: admin
  - Manager secret: admin
  - Deny: 0.0.0.0/0.0.0.0
  - Permit: 172.16.123.123/255.255.0.0&192.168.1.0/2
- Rights:**
  - System: read:  write:
  - Call: read:  write:
  - Log: read:  write:
  - Verbose: read:  write:

**Table 7-1-1 Definition of Asterisk API**


Options	Definition
Port	Network port number
Manager Name	Name of the manager without space
Manager secret	Password for the manager. Characters: Allowed characters “-_.<>&0-9a-zA-Z”. Length:4-32 characters.
Deny	If you want to deny many hosts or networks, use char & as separator.Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.0&10.0.0.0/255.0.0.0



Permit	If you want to permit many hosts or network, use char & as separator.Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.255.0&10.0.0.0/255.0.0.0
System	General information about the system and ability to run system management commands, such as Shutdown, Restart, and Reload.
Call	Information about channels and ability to set information in a running channel.
Log	Logging information. Read-only. (Defined but not yet used.)
Verbose	Verbose information. Read-only. (Defined but not yet used.)
Command	Permission to run CLI commands. Write-only.
Agent	Information about queues and agents and ability to add queue members to a queue.
User	Permission to send and receive UserEvent.
Config	Ability to read and write configuration files.
DTMF	Receive DTMF events. Read-only.
Reporting	Ability to get information about the system.
CDR	Output of cdr, manager, if loaded. Read-only.
Dialplan	Receive NewExten and Varset events. Read-only.
Originate	Permission to originate new calls. Write-only.
All	Select all or deselect all.

Once you set like the above figure, the host 172.16.80.16/255.255.0.0 is allowed to access the gateway API. Please refer to the following figure to access the gateway API by putty. 172.16.80.16 is the gateway's IP, and 5038 is its API port.

Figure 7-1-2 Putty Access

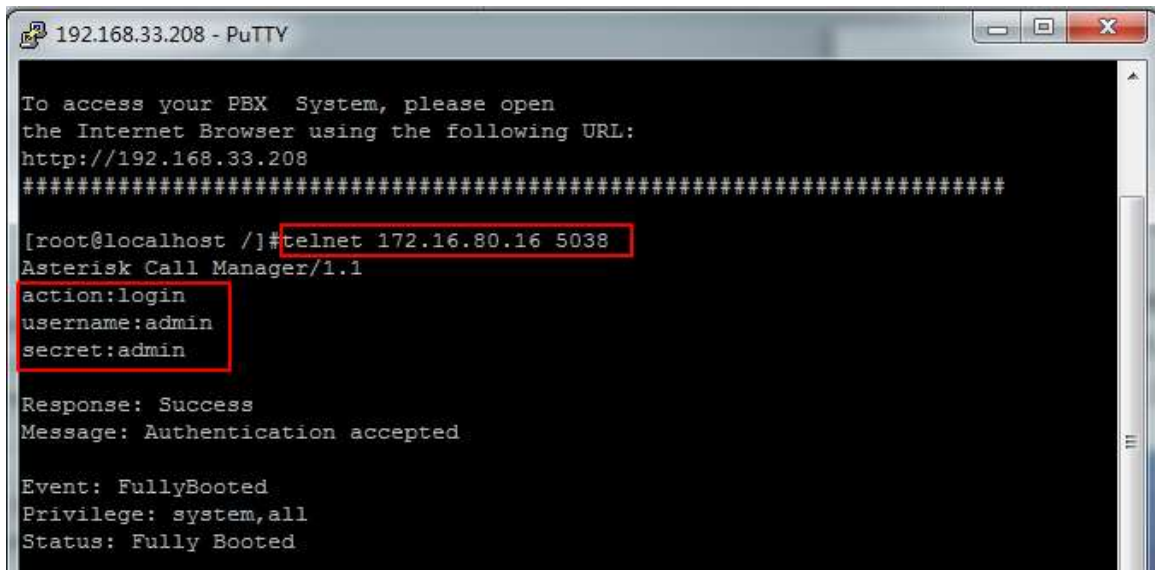

## Asterisk CLI

In this page, you are allowed to run Asterisk commands.

Figure 7-2-1 Asterisk Command Interface



**Output:**

```
! Execute a shell command
agi dump html Dumps a list of AGI commands in HTML format
agi exec Add AGI command to a channel in Async AGI
agi set debug [on|off] Enable/Disable AGI debugging
agi show commands [topic] List AGI commands or specific help
aoc set debug enable cli debugging of AOC messages
cc cancel Kill a CC transaction
cc report status Reports CC stats
cdr show status Display the CDR status
cel show status Display the CEL status
channel request hangup Request a hangup on a given channel
```

Table 7-2-1 Definition of Asterisk API

Options	Definition
Command	Type your Asterisk CLI commands here to check or debug your gateway.

If you type “help” or “?” and execute it, the page will show you the executable commands.

## Asterisk File Editor

On this page, you are allowed to edit and create configuration files.

Click the file to edit.

**Figure 7-3-1 Configuration Files List**

Configuration Files	
File Name	File Size
<a href="#">asterisk.conf</a>	247
<a href="#">astmanproxy.conf</a>	440
<a href="#">capture_channel.conf</a>	0
<a href="#">cdr.conf</a>	572
<a href="#">chan_dahdi.conf</a>	240
<a href="#">dahdi-channels.conf</a>	2982
<a href="#">dahdi_startuo.conf</a>	78
<a href="#">dnsmgr.conf</a>	245
<a href="#">extensions.conf</a>	195
<a href="#">extensions_dialmatchingrules.conf</a>	927

1 2 3 4 > 1 / 4 go

New Configuration File Reload Asterisk

Click “New Configuration File” to create a new configuration file. After editing or creating, please reload Asterisk.

# 8. Logs

## Log Settings

On the “Log Settings” page, you should set the related logs on to scan the responding logs page. For example, set “System Logs” on like the following, then you can turn to “System” page for system logs, otherwise, system logs is unavailable. And the same with other log pages.

Figure 8-1-1 Logs Settings

<b>System Logs</b>	
System Logs:	<input checked="" type="checkbox"/> ON
Auto clean:	<input checked="" type="checkbox"/> ON    maxsize : 1MB ▾
<b>Asterisk Logs</b>	
Verbose:	<input type="checkbox"/> OFF
Notice:	<input type="checkbox"/> OFF
Warning:	<input type="checkbox"/> OFF
Debug:	<input type="checkbox"/> OFF
Error:	<input type="checkbox"/> OFF
DTMF:	<input type="checkbox"/> OFF
Auto clean:	<input checked="" type="checkbox"/> ON    maxsize : 100KB ▾
<b>SIP Logs</b>	
SIP Logs:	<input type="checkbox"/> OFF
Auto clean:	<input checked="" type="checkbox"/> ON    maxsize : 100KB ▾
<b>Call Detail Record</b>	
Call Detail Record:	<input type="checkbox"/> OFF
Auto clean:	<input checked="" type="checkbox"/> ON    maxsize : 20MB ▾

**Table 8-1-1 Definition of LOG**

Options	Definition
System Logs	Whether enable or disable system log.
Auto clean (System Logs)	switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, max size=1MB.
Verbose	Asterisk console verbose message switch.
Notice	Asterisk console notice message switch.
Warning	Asterisk console warning message switch.
Debug	Asterisk console debug message switch.
Error	Asterisk console error message switch.
DTMF	Asterisk console DTMF info switch.
Auto clean: (asterisk logs)	switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, max size=100KB.
SIP Logs:	Whether enable or disable SIP log.
Auto clean: (SIP logs)	switch on : when the size of log file reaches the max size,the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, default size=100KB.
Call Detail Record	Displaying Call Detail Records for each channel.
Auto clean: (Call Detail Record)	switch on : when the size of log file reaches the max size,the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, default size=20MB.

## System

Figure 8-2-1 System Logs Output



**Notice:** The same to Asterisk Logs and SIP Logs.

## CDR

You can scan every call detail records in this page. We also provide the filter for you to search some specific records.

Figure 8-3-1 Call Detail Record

Caller ID	Callee ID	From	To	Start Time	Duration	Result	
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	from <input type="text"/> to <input type="text"/>	from <input type="text"/> to <input type="text"/>	All <input type="button" value="v"/>	
<input type="button" value="Filter"/>	<input type="button" value="Clean Filter"/>						
<b>Total Records: 281</b>							
<input type="checkbox"/>	Caller ID	Callee ID	From	To	Start Time	Duration	Result
<input type="checkbox"/>	8888	8008	8008	fxs-8	2017-12-13 17:43:36	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	8005	8005	fxs-5	2017-12-13 17:43:33	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	8008	8008	fxs-8	2017-12-13 16:35:11	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	8008	8008	fxs-8	2017-12-13 16:33:40	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	8008	8008	fxs-8	2017-12-13 16:31:51	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	9001	fvo-1	9001	2017-12-12 15:45:16	00:00:00	NO ANSWER
<input type="checkbox"/>	8888	9001	fvo-1	9001	2017-12-12 15:44:57	00:00:00	BUSY
<input type="checkbox"/>	12345	8888	12345	9000	2017-12-12 15:43:11	00:00:01	ANSWERED
<input type="checkbox"/>	8888	9002	fvo-2	9002	2017-12-12 15:25:44	00:00:10	ANSWERED
<input type="checkbox"/>	8888	9001	fvo-1	9001	2017-12-12 15:25:36	00:00:00	NO ANSWER
<input type="button" value="1"/> <input type="button" value="2"/> <input type="button" value="3"/> <input type="button" value="4"/> <input type="button" value="5"/> <input type="button" value="6"/> <input type="button" value="7"/> <input type="button" value="8"/> <input type="button" value="9"/> <input type="button" value="10"/> <input type="button" value="11"/> <input type="button" value="1"/> / 29 <input type="button" value="go"/>							
<input type="button" value="Delete"/> <input type="button" value="Clean Up"/> <input type="button" value="Export"/>							